

## INSTRUCTIONS FOR RE-TUNING YOUR ARION AF-3330 RECEIVER TO THE OPTUS D2 SATELLITE

Please follow the steps as listed and do not change anything unless specified and please do not reset your receiver to factory setting if you are unable to complete the re-tune.

Warning – Attempt the re-tuning of your set top box at your own risk. Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.

PLEASE BE AWARE – THESE INSTRUCTIONS WILL BE INEFFECTIVE IF YOU HAVE PERFORMED A FACTORY RESET

### STEP 1 - Deleting the current channel list

- A. Turn on your **TV** and receiver
- B. By using your remote press the **MENU** button and scroll **LEFT** or **RIGHT** to **EDIT**
- C. Next select **EDIT CHANNEL** and press the **OK** button. The receiver may request a password. Enter **9402** by using the numbers on the remote or if that does not work try **0000**
- D. On the left of the screen you will see **TV**, scroll **DOWN** and highlight **TV** and press the **OK** button
- E. Next press the **YELLOW (PAUSE)** button on your remote to enter delete mode.
- F. Next scroll up and down the channel list on the right of the screen and press the **GREEN (AUDIO)** Button on the remote on each channel in the list until all of the channels have a ✓ on the right of them.
- G. Next press the **YELLOW (PAUSE)** button and a confirmation message will display “**ARE YOU SURE?**” and press the **OK** button
- H. Next press the **EXIT** button.

### STEP 2 - Re-scanning the new frequency 12706 for the Christian Channels

- A. Next scroll **LEFT** or **RIGHT** and to **SEARCH CHANNEL** and then scroll down and select **MANUAL SEARCH** and press the **OK** button. The receiver may request a password. Enter **9402** by using the numbers on the remote or if that does not work try **0000**
- B. Once you are in **MANUAL SEARCH**, highlight **SATELLITE** and scroll **LEFT** or **RIGHT** and select **OPTUS B3**.  
**Please note that Optus D2 will not be in the list**
- C. Next scroll down to **FREQUENCY** and enter **12706** by using the numbers on the remote
- D. Next scroll down to **SYMBOL RATE** and enter **22500** by using the numbers on the remote
- E. Next scroll down to **POLARIZATION** and press left or right on the remote to select **VER**
- F. Next scroll down to **FEC** and select  $\frac{3}{4}$
- G. Next scroll down to **NETWORK SEARCH** and select **YES**
- H. Next scroll down to **FTA ONLY** and select **YES**
- I. Next press the **RED (UHF)** button on the remote and the receiver will begin searching for the channels
- J. Once the search is completed the receiver will display a message “**SAVING AND THEN SEARCH SUCCESS**” next press the **OK** button. Next press the **EXIT** button

Once you have finished **STEP 2** please press the **EXIT** button until you are in the Main Menu and then follow **STEP 3**

Please note that the receiver will scan all the channels on that Frequency so the Christian Channels will not be grouped and will be mixed between the other foreign channels.

If you wish to delete any of the foreign channels, Please follow **STEP 3**

### STEP 3 - Deleting unwanted Channels

- A. From the **MAIN MENU**, scroll left or right and highlight **EDIT CHANNEL** and press the **OK** button. The receiver may request a password. Enter **9402** by using the numbers on the remote or if that does not work try **0000**
- B. On the left of the screen you will see **TV** scroll down and highlight **TV** and press the **OK** button
- C. Next press the **YELLOW (PAUSE)** button on your remote to enter delete mode
- D. Next scroll through the channel list on the right and press the **GREEN (AUDIO)** Button on the remote on each unwanted channel in the list until. The unwanted channels should have a ✓ on the right of them
- E. When you are finished, press the **YELLOW (PAUSE)** button and a confirmation message will display “**ARE YOU SURE?**” and then press the **OK** button on the remote
- F. Next press the **EXIT** button

If you would like to group your favorite's channels together in the Channel list please follow **STEP 4**

#### **STEP 4 - Grouping your favourite channels together in the channel list**

- A.** From the **MAIN MENU**, scroll left or right and highlight **EDIT CHANNEL** and press the **OK** button. The receiver will request a password. Enter **9402** by using the numbers on the remote or if that does not work try **0000**
- B.** On the left of the screen, select **TV** and press the **OK** button
- C.** Next highlight the channel you would like to move and press the **GREEN (AUDIO)** button on your remote
- D.** Next scroll **UP** or **DOWN** and move the channel to where you would like it to appear in the list and press the **BLUE (RECALL)** button. Continue this with the various channels until you are satisfied with the list.
- E.** When you are finished press the **EXIT** button on the remote and a message will display saying **SAVING...**
- F.** Next press the **EXIT** button to exit out of the **MAIN MENU**

Please make sure all of the channels are working and are in your order of preference.

The Christian Channels:

- 1. Hope Channel**
- 2. 3ABN**
- 3. Trinity**
- 4. JCTV**
- 5. The Church Channel**
- 6. Smile of a Child**
- 7. God TV**
- 8. Daystar TV**
- 9. Inspiration Network**
- 10. EWTN**
- 11. Apostolic Oneness Network (AON)**

Other Channels of Interest

- 1. Press TV**
- 2. Russia Today**