

## INSTRUCTIONS FOR RE-TUNING YOUR PHOENIX RECEIVER TO THE OPTUS D2 SATELLITE

Please follow the steps as listed and do not change anything unless specified and please do not reset your receiver to factory setting if you are unable to complete the re-tune.

Warning – Attempt the re-tuning of your set top box at your own risk. Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.

PLEASE BE AWARE – THESE INSTRUCTIONS WILL BE INEFFECTIVE IF YOU HAVE PERFORMED A FACTORY RESET

### STEP 1 - Deleting the current channel list

- A. Turn on your TV and receiver
- B. By using your remote press the **MENU** button and scroll **LEFT** to **CHANNEL MANAGER**
- C. Next scroll **DOWN** and highlight **TV CHANNEL** and press the **OK** button on the remote. The receiver may request a password. Enter **0000** by using the numbers on the remote. If **0000** is not working you will need to contact your installer for the password
- D. Next press the **RED (AUDIO)** Button 4 Times on the remote until you see **X DELETE ALL** displayed in red on the top of the screen.
- E. Next press the **OK** Button on the remote and all of the channels will have an **X** in front of them.
- F. Next press the **EXIT** button on the remote and the receiver will display a message “**ARE YOU SURE TO DELETE MARKED CHANNELS?**” highlight **OK** on the screen and press the **OK** button on the remote

### STEP 2 - Re-scanning the new frequency 12706 for the Christian Channels

- A. Now scroll **RIGHT** to **INSTALLATION**
- B. Next scroll down and select **CHANNEL SEARCH** and press the **OK** button. The receiver may request a password. Enter **0000** by using the numbers on the remote. If **0000** is not working you will need to contact your installer for the password
- C. Next highlight **ANTENNA** and press the **OK** button
- D. Next scroll down in the list and select highlight number **15** and press the **OK** button
- E. Please make sure that **SATELLITE** is displaying **OPTUS B3** if not go back to **ANTENNA** and press the right or left button until you see **OPTUS B3**
- F. Next scroll down to **TRANSPONDER** and press the **BLUE (AUDIO R/L)** button to **ADD NEW TP**
- G. Next scroll down to **FREQUENCY** and enter **12706** by using the numbers on the remote
- H. Next scroll down to **SYMBOL RATE** and enter **22500** by using the numbers on the remote
- I. Next scroll down to **POLARIZATION** and press the left or right button on the remote to select **VER**
- J. Next scroll down to **SEARCH MODE** and press the left or right button on the remote to select **FTA**
- K. Next scroll down to **SEARCH NETWORK** and press the left or right button on the remote to select **YES**
- L. Next scroll down and highlight **SEARCH TP** and press the left or right button on the remote to select **SEARCH 1 SAT** and press the **OK** button
- M. When the receiver is finished scanning a **CHANNEL SEARCH** window will appear on the screen highlight **EXIT** and press the **OK** button
- N. Next press the **EXIT** button to exit channel search.

Please note that the receiver will scan all the channels on that Frequency so the Christian Channels will not be grouped and will be mixed between the other foreign channels.

If you wish to delete any of the foreign channels, Please follow **STEP 3**

### STEP 3 - Deleting unwanted Channels

- A. Scroll to left to **CHANNEL MANAGER** and select **TV CHANNEL** and press the **OK** button. The receiver may request a password. Enter **0000** by using the numbers on the remote. If **0000** is not working you will need to contact your installer for the password
- B. Next press the **RED (AUDIO)** Button once and you will see **X DELETE CH** displayed in red on the top of the screen.
- C. Next scroll **UP** or **DOWN** through the list on channels on the right of the screen and then press the **OK** Button on the channels that you wish to delete. The channels that you have selected should have an **X** in front of them

- D. Next press the **EXIT** button on the remote and the receiver will display a message “**ARE YOU SURE TO DELETE MARKED CHANNELS?**” highlight **OK** on the screen and press the **OK** button on the remote

If you would like to group your favorite’s channels together in the Channel list please follow **STEP 4**

#### **STEP 4 - Grouping your favourite channels together in the channel list**

- A. Scroll to **CHANNEL MANAGER** and select **TV CHANNEL** and press the **OK** button. The receiver may request a password. Enter **0000** by using the numbers on the remote. If **0000** is not working you will need to contact your installer for the password
- B. Next press the **YELLOW** button on the remote and you should see **MOVE** displayed in yellow on the top of the screen.
- C. Next scroll **UP** or **DOWN** through the list on the right of the screen and then press the **OK** button on the channels you wish to move
- D. Next by using the **UP** and **DOWN** arrow on the remote and scroll to where you would like the channel to appear in the list and press the **OK** button
- E. Continue this with the various channels until you are satisfied with the list.
- F. Once you are finished press the **EXIT** button on the remote twice to exit out of the menu and the receiver will save the changes.

Please make sure all of the channels are working and are in your order of preference.

The Christian Channels:

- 1. **Hope Channel**
- 2. **3ABN**
- 3. **Trinity**
- 4. **JCTV**
- 5. **The Church Channel**
- 6. **Smile of a Child**
- 7. **God TV**
- 8. **Daystar TV**
- 9. **Inspiration Network**
- 10. **EWTN**
- 11. **Apostolic Oneness Network (AON)**

Other Channels of Interest

- 1. **Press TV**
- 2. **Russia Today**