

# INSTRUCTIONS FOR RE-TUNING YOUR STGOLD ST-2000F RECEIVER TO THE OPTUS D2 SATELLITE

Please follow the steps as listed and do not change anything unless specified and please do not reset your receiver to factory setting if you are unable to complete the re-tune.

Warning – Attempt the re-tuning of your set top box at your own risk. Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.

PLEASE BE AWARE – THESE INSTRUCTIONS WILL BE INEFFECTIVE IF YOU HAVE PERFORMED A FACTORY RESET

## STEP 1 - Deleting the current channel list

- A. Turn on your TV and receiver
- B. By using your remote press the **MENU** button and select **USER PREFERENCE** on the screen and press **OK**
- C. Select **EDIT CHANNEL** and press the **OK** button
- D. The receiver will request a password. Enter **9402** and press **OK** or if that does not work try **0000**
- E. On the bottom left of the screen ensure a tick is next to **DELETE**.
- F. Now scroll through the channel list on the right and press the **OK** Button on each channel in the list until all of the channels have an **X** in front of them.
- A. Next press the **EXIT** button on the remote and the receiver will display a message **DO YOU WANT TO SAVE CHANGES?** Highlight **YES** and press the **OK** button.
- G. Exit to the Main Menu

## STEP 2 - Re-scanning the new frequency 12706 for the Christian Channels

- A. From the **MAIN MENU** select **INSTALLATION** and press the **OK** button.
- B. The receiver will request a password. Enter **9402** or if that does not work try **0000**
- C. Once you are in the **INSTALLATION** menu, highlight **SCAN TRANSPONDER** and press the **OK** button.
- D. Next scroll down to **DISH** and ensure it is displaying **1 OPTUS B3**.
- E. Next scroll down to **FREQUENCY** and enter **12706** by using the numbers on the remote.
- F. Next scroll down to **POLARITY** and press left or right on the remote and select **VERTICAL**.
- G. Next scroll down to **SYMBOL RATE** and enter **22500** by using the numbers on the remote.
- H. Next scroll down to **CODE RATE** and select **3/4**.
- I. Next scroll down to **SCAN MODE** and select **FREE CHANNEL**.
- J. Next scroll down to **NETWORK SEARCH** and select **ENABLE**.
- K. Next press **OK** and the receiver will begin searching for the channels. Once the search is completed the receiver will display a message **DO YOU WANT TO SAVE CHANGES?**
- L. Highlight **YES** and press the **OK** button.

Once you have finish **STEP 2** please press the **EXIT** button on the remote until you are in the Main Menu and when follow **STEP 3**.

Please note that the receiver will scan all the channels on that Frequency so the Christian Channels will not be grouped and will be mixed between the other foreign channels.

If you wish to delete any of the foreign channels, Please follow **STEP 3**.

## STEP 3 - Deleting unwanted Channels

- A. From the **MAIN MENU** select **USER PREFERENCE** and press the **OK** button
- B. Next select **EDIT CHANNEL** and press the **OK** button. The receiver will request a password. Enter **9402** or if that does not work try **0000** press the **OK** button
- C. On the bottom left of the screen ensure a tick is next to **DELETE**.
- D. Next scroll through the channel list on the right and press the **OK** button on the unwanted channel in the list. The unwanted channels should have an **X** in front of them.
- B. When you are finish press the **EXIT** button on the remote and the receiver will display a message **DO YOU WANT TO SAVE CHANGES?** Highlight **YES** and press the **OK** button.

If you would like to group your favourite channels together in the Channel list please follow **STEP 4**.

#### **STEP 4 - Grouping your favourite channels together in the channel list**

- A.** Select **EDIT CHANNEL** and press the **OK** button. The receiver will request a password. Enter **9402** or if that does not work try **0000** press the **OK** button
- B.** On the bottom left of the screen, highlight **MOVE** and press the **OK** button. Ensure a tick is next to **MOVE**
- C.** Next scroll through the channel list on the right and press the **OK** Button on the channel that you would like to move. Now scroll **UP** or **DOWN** and move the channel to where you would like it to appear in the list and then press the **OK** button. Continue this with the various channels until you are satisfied with the list.
- D.** Once you are finished press the **EXIT** button on the remote and the receiver will display a message **DO YOU WANT TO SAVE CHANGES?** Highlight **YES** and press the **OK** button.
- E.** Now press the **EXIT** button twice

Make sure all of the channels are working and are in your order of preference.

The Christian Channels:

- 1. Hope Channel**
- 2. 3ABN**
- 3. Trinity**
- 4. JCTV**
- 5. The Church Channel**
- 6. Smile of a Child**
- 7. God TV**
- 8. Daystar TV**
- 9. Inspiration Network**
- 10. EWTN**
- 11. Apostolic Oneness Network (AON)**

Other Channels of Interest

- 1. Press TV**
- 2. Russia Today**