

INSTRUCTIONS FOR RE-TUNING YOUR STRONG SRT 3650 RECEIVER TO THE OPTUS D2 SATELLITE

Please follow the steps as listed and do not change anything unless specified and please do not reset your receiver to factory setting if you are unable to complete the re-tune.

Warning – Attempt the re-tuning of your set top box at your own risk. Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.

STEP 1 - Deleting the current channel list

- A. Turn on your TV and receiver
- B. By using your remote press the **MENU** button and scroll to and highlight **CHANNELS MANAGER** and press the **OK** button.
- C. Next highlight **EDIT CHANNELS** and press the **OK** button
- D. Next press the **RED (AUDIO)** button on your remote and all of the channels will have an **X** in front of them
- E. Next press the **EXIT** button on the remote and the receiver will display a message “**Do you want to delete?**” Highlight **YES** in yellow and press the **OK** button
- F. Next press the **EXIT** button to exit out of the installation menu.

STEP 2 - Re-scanning the new frequency 12706 for the Christian Channels

- A. Press the **MENU** button and scroll to and highlight **INSTALLATION** and press the **OK** button. The receiver may request a password. Enter **9402** or if that does not work try **0000**
- B. Next highlight **MANUAL SEARCH** and press the **OK** button
- C. Next highlight **SATELLITE NAME** press the **OK** button and then a list will pop up then scroll **UP** or **DOWN** and highlight **29 OPTUS B3** and press the **OK** button
- D. Next scroll down and highlight **FREQUENCY** and enter **12706** using the numbers on the remote
- E. Next scroll down and highlight **SYMBOL RATE** and enter **22500** using the numbers on the remote
- F. Next scroll down and highlight **POLARIZATION** and scroll **LEFT** or **RIGHT** by using the remote and select **VER**
- G. Next scroll down and highlight **SEARCH TYPE** and scroll **LEFT** or **RIGHT** and select **FTA**
- H. Next scroll down and highlight **NIT SEARCH** and scroll **LEFT** or **RIGHT** and select **ON**
- I. **Please check setting A to H before continuing**
- J. Next press the **BLUE (SUBTITLE)** button on your remote and the receiver will begin searching for the channels

Once you have finished **STEP 2**. Press the **EXIT** button and the receiver will save the changes and exit out of the installation menu and then follow **STEP 3**

Please note that the receiver will scan all the channels on that Frequency so the Christian Channels will not be grouped and will be mixed between the other foreign channels.

If you wish to delete any of the foreign channels, Please follow **STEP 3**.

STEP 3 - Deleting unwanted Channels

- A. Press the **MENU** button and highlight **CHANNELS MANAGER** and press the **OK** button
- B. Next highlight **EDIT CHANNELS** and press the **OK** button
- C. Next scroll **UP** or **DOWN** in the list of channels and press the **OK** button on the unwanted channel. The unwanted channels should have an **X** in front of the channel
- D. Next press the **EXIT** button on the remote and the receiver will display a message “**Do you want to delete?**” Highlight **YES** and press the **OK** button

If you would like to group your favorite's channels together in the Channel list please follow **STEP 4**. If not press the **EXIT** button to exit the installation menu the receiver will save the changes and exit

STEP 4 - Grouping your favourite channels together in the channel list

- A.** On the bottom of the screen scroll **LEFT** or **RIGHT** and highlight **MOVE**.
- B.** Next scroll **UP** or **DOWN** in the list of channels and press the **OK** button on the channel that you would like to move.
- C.** Next press the **RED (AUDIO)** button and a **✓** should will appear in the front of the channel
- D.** Now scroll **UP** or **DOWN** and move the channel to where you would like it to appear in the list and then press the **OK** button. Continue **B**, **C** and **D** with the various channels until you are satisfied with the list.
- E.** Once you are finished press the **EXIT** button on the remote and the receiver will save the changed and exit out of the installation menu.

Please make sure all of the channels are working and are in your order of preference.

The Christian Channels:

- 1. Hope Channel**
- 2. 3ABN**
- 3. Trinity**
- 4. JCTV**
- 5. The Church Channel**
- 6. Smile of a Child**
- 7. God TV**
- 8. Daystar TV**
- 9. Inspiration Network**
- 10. EWTN**
- 11. Apostolic Oneness Network (AON)**

Other Channels of Interest

- 1. Press TV**
- 2. Russia Today**

Christian Satellite Pty Ltd Tel: 1300 851 494 Website: www.christiansatellite.com.au