

INSTRUCTIONS FOR RE-TUNING YOUR STRONG SRT 4620 RECEIVER TO THE OPTUS D2 SATELLITE

Please follow the steps as listed and do not change anything unless specified and please do not reset your receiver to factory setting if you are unable to complete the re-tune.

Warning – Attempt the re-tuning of your set top box at your own risk. Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.

PLEASE BE AWARE – THESE INSTRUCTIONS WILL BE INEFFECTIVE IF YOU HAVE PERFORMED A FACTORY RESET

STEP 1 - Deleting the current channel list

- A. Turn on your TV and receiver
- B. By using your remote press the **CH.LIST** button on the remote
- C. Next press the **BLUE** button on the remote and the receiver may request a password. Enter **9402** and or if that does not work try **0000** then a window will pop up “**DO YOU WANT TO DELETE THIS CHANNEL?**”
- D. Next press the **ENTER** button on the remote to delete the channel
- E. Next go through the channel list and highlight each channel one by one and press the **BLUE** button and the **ENTER** button on the remote.
- F. Once all the channels have been deleted press the **EXIT** button to exit **CH.LIST** menu

STEP 2 - Re-scanning the new frequency 12706 for the Christian Channels

Please note that the Strong SRT4620 receiver does not have Network Search so you will need to scan 4 frequencies 12706, 12644, 12519 and 12732

- A. Press the **MAIN** button on the remote
- B. From the **MAIN MENU** highlight **INSTALLATION** and press the **ENTER** button. The receiver may request a password. Enter **9402** or if that does not work try **0000**
- C. Next scroll down and highlight **TP EDIT/SCAN** and press the **ENTER** button
- D. Next highlight **SATELLITE NAME** and scroll left or right and select **OPTUS B3/KU**
- E. Next scroll down and highlight **TP FREQUENCY** and enter **12706** by using the numbers on the remote
- F. Next scroll down and highlight **POLARIZATION** and scroll left or right using the remote and select **VERTICAL 14V**
- G. Next scroll down and highlight **SYMBOL RATE** and enter **22500** by using the numbers on the remote
- H. Next scroll down and highlight **SCAN** and scroll left or right and select **FREE ONLY**
- I. **Please check setting D to G before continuing**
- J. Next press the **ENTER** button and the receiver will begin searching for the channels
- K. Next when the scan is finished a window with channels will appear
- L. Press the **EXIT** button once
- M. Next scroll up and highlight **TP FREQUENCY** and enter **12644** by using the numbers on the remote
- N. Next scroll down and highlight **SCAN** and press the **ENTER** button and the receiver will begin searching for the channels
- O. Next when the scan is finished a window with channels will appear listing all the channels scanned
- P. Press the **EXIT** button once
- Q. Next scroll up and highlight **TP FREQUENCY** and enter **12519** by using the numbers on the remote
- R. Next scroll down and highlight **SCAN** and press the **ENTER** button and the receiver will begin searching for the channels
- S. Press the **EXIT** button until you are out of the installation menu.

Once you have finish **STEP 2** please follow **STEP 3**.

Please note that the receiver will scan all the channels on that Frequency so the Christian Channels will not be grouped and will be mixed between the other foreign channels.

If you wish to delete any of the foreign channels, Please follow **STEP 3**.

STEP 3 - Deleting unwanted Channels

- A.** Press the **CH.LIST** button on the remote
- B.** Next scroll through the channel list and highlight the channel that you would like to delete
- C.** Next press the **BLUE** button on the remote and the receiver may request a password. Enter **9402** and or if that does not work try **0000** then a window will pop up **“DO YOU WANT TO DELETE THIS CHANNEL?”**
- D.** Next press the **ENTER** button on the remote to delete the channel
- E.** Continue this with the various channels until you are satisfied with the list.

Once you have finished deleting all of the unwanted channels you can group your favorite's channels together in the Channel list please follow **STEP 4**. If you are happy with the list please press the **EXIT** button until you have exit **CH.LIST**

STEP 4 - Grouping your favourite channels together in the channel list

- A.** Scroll highlight the channel that you would like to move
- B.** Next press the **YELLOW** button on the remote.
- C.** Next scroll through the channel list and move the channel to where you would like it to appear in the list and press **YELLOW** button. Continue this with the various channels until you are satisfied with the list.
- D.** Once you are finished press the **EXIT** button on the remote to exit the **CH.LIST** and the receiver will save the changes.

Please make sure all of the channels are working and are in your order of preference.

The Christian Channels:

- 1. Hope Channel**
- 2. 3ABN**
- 3. Trinity**
- 4. JCTV**
- 5. The Church Channel**
- 6. Smile of a Child**
- 7. God TV**
- 8. Daystar TV**
- 9. Inspiration Network**
- 10. EWTN**
- 11. Apostolic Oneness Network (AON)**

Other Channels of Interest

- 1. Press TV**
- 2. Russia Today**