

INSTRUCTIONS FOR RE-TUNING YOUR STRONG SRT 4650 RECEIVER TO THE OPTUS D2 SATELLITE

Please follow the steps as listed and do not change anything unless specified and please do not reset your receiver to factory setting if you are unable to complete the re-tune.

Warning – Attempt the re-tuning of your set top box at your own risk. Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.

PLEASE BE AWARE – THESE INSTRUCTIONS WILL BE INEFFECTIVE IF YOU HAVE PERFORMED A FACTORY RESET

STEP 1 - Deleting the current channel list

- A. Turn on your TV and receiver
- B. By using your remote press the **MENU** button and scroll down and select **CHANNELS** and press the **OK** button
- C. The receiver may request a password. Enter **9402** and or if that does not work try **0000**
- D. Next scroll down and highlight **DELETE CHANNELS** and press the **OK** button
- E. Next press the **INFO** button on your remote and you will be prompted to re-enter the password.
- F. Enter the password – when the message appears “**Warning! Do you want to delete**” Highlight **YES** in yellow and press the **OK** button
- G. Next press the **EXIT** button to exit the Delete Channels menu

STEP 2 - Re-scanning the new frequency 12706 for the Christian Channels

- A. From the **MAIN MENU** highlight **INSTALLATION** and press the **OK** button. The receiver may request a password. Enter **9402** or if that does not work try **0000**
- B. Next scroll down and highlight **MANUAL SCAN** and press the **OK** button
- C. Next scroll down and highlight **SATELLITE** and scroll left or right and select **OPTUS B3/KU**
- D. Next press the **GREEN (AUDIO)** button on the remote
- E. Next highlight **FREQUENCY** and enter **12706** by using the numbers on the remote
- F. Next highlight **SYMBOL RATE** and enter **22500** by using the numbers on the remote
- G. Next highlight **POLARIZATION** and scroll left or right using the remote and select **V**
- H. Next highlight **SEARCH TYPE** and scroll left or right and select **FTA ONLY**
- I. Next highlight **NETWORK SEARCH** and scroll left or right and select **ON**
- J. **Please check setting E to I before continuing**
- K. Next press the **OK** button and the receiver will begin searching for the channels
- L. Once the scan has finished press the **EXIT** button once

Once you have finish **STEP 2** please follow **STEP 3**.

Please note that the receiver will scan all the channels on that Frequency so the Christian Channels will not be grouped and will be mixed between the other foreign channels.

If you wish to delete any of the foreign channels, Please follow **STEP 3**.

STEP 3 - Deleting unwanted Channels

- H. From the **MAIN MENU** scroll left and highlight **CHANNELS** and press the **OK** button
- I. The receiver will request a password. Enter **9402** or if that does not work try **0000**
- J. Next highlight **DELETE CHANNELS** and press the **OK** button
- K. Next scroll through the channel list and press the **OK** button on all the unwanted channels in the list and all the unwanted channels should have an **X** in front of them.
- L. When you are finished press the **EXIT** button on the remote and the receiver will display a message “**Warning! Do you want to delete**” Highlight **YES** in yellow and press the **OK** button and the receiver will exit out of the delete channel menu.

If you would like to group your favorite's channels together in the Channel list please follow **STEP 4**.

STEP 4 - Grouping your favourite channels together in the channel list

- A.** From the **MAIN MENU** scroll **UP** highlight **MOVE CHANNELS** and press the **OK** button.
- B.** Next scroll through the channel list and press the **OK** button on the channel that you would like to move. Now scroll **UP** or **DOWN** and move the channel to where you would like it to appear in the list and press **OK**. Continue this with the various channels until you are satisfied with the list.
- C.** Once you are finished press the **EXIT** button on the remote and the receiver will display a message "**Settings were changed DO YOU WANT TO SAVE?**" Highlight **YES** in yellow and press the **OK** button.
- D.** Now press the **EXIT** button twice

Please make sure all of the channels are working and are in your order of preference.

The Christian Channels:

- 1. Hope Channel**
- 2. 3ABN**
- 3. Trinity**
- 4. JCTV**
- 5. The Church Channel**
- 6. Smile of a Child**
- 7. God TV**
- 8. Daystar TV**
- 9. Inspiration Network**
- 10. EWTN**
- 11. Apostolic Oneness Network (AON)**

Other Channels of Interest

- 1. Press TV**
- 2. Russia Today**