

INSTRUCTIONS FOR RE-TUNING YOUR PACIFIC SATELLITE DSR2882S RECEIVER TO THE OPTUS D2 SATELLITE

Please follow the steps as listed and do not change anything unless specified and please do not reset your receiver to factory setting if you are unable to complete the re-tune.

Warning – Attempt the re-tuning of your set top box at your own risk. Christian Satellite is not liable for any damage or loss of programming that may be incurred by following these instructions.

PLEASE BE AWARE – THESE INSTRUCTIONS WILL BE INEFFECTIVE IF YOU HAVE PERFORMED A FACTORY RESET

STEP 1 - Deleting the current channel list

- A. Turn on your TV and receiver
- B. By using your remote press the **MENU** button and scroll down and select **ORGANISING SERVICES** and press the **OK** button
- C. Next scroll down and highlight **CLEAR ALL TV CHANNELS** and press the **OK** button
- D. A pop up window will ask you are you sure – highlight **YES** and press **OK**
- E. Press the **EXIT** button to exit menu

STEP 2 - Re-scanning the new frequency 12706 for the Christian Channels

- A. Press the **MENU** button on your remote
- B. Highlight **INSTALLATION** and press the **OK** button.
- C. Next scroll down and highlight **CHANNEL SEARCH** and press the **OK** button. You should now be in the **CHANNEL SEARCH** menu
- D. Highlight **SATELLITE** and press **OK**. A window will pop up. Scroll through the list of satellites and highlight **OPTUS B3 156E** and press the **OK** button on the remote
- E. Next scroll down to **SEARCH MODE** and scroll left or right and select **MANUAL**
- F. Next scroll down to **FREQUENCY** and by using the numbers on the remote enter **12706**
- G. Next Scroll down and highlight **SYMBOL RATE** and by using the numbers on the remote enter **22500**
- H. Scroll down to **POLARISATION** and by scrolling left or right select **VER**
- I. Scroll down to **NETWORK SEARCH** and by scrolling left or right select **ON**.
- J. Next press the **OK** button and the receiver will begin searching for the new frequencies and channels
- K. Once the scan has finished press the **OK** button once and then press the **MENU** button – the system will save and exit **CHANNEL SEARCH**. When it has finished saving, press the **EXIT** button.

Once you have finished **STEP 2** please follow **STEP 3**.

Please note that the receiver will scan all the channels on that Frequency so the Christian Channels will not be grouped and will be mixed between the other foreign channels.

If you wish to delete any of the foreign channels, Please follow **STEP 3**.

STEP 3 - Deleting unwanted Channels

- F. By using your remote press the **MENU** button and scroll down and select **ORGANISING SERVICES** and press the **OK** button
- G. Next highlight **TV CHANNELS** and press the **OK** button
- H. Next scroll through the channel list and press the **OK** button on all the unwanted channels in the list. The channel number of the selected channels should highlight in yellow
- I. When you are finished selecting the channels you wish to delete, press the **MENU** button on the remote and the receiver will delete all the highlighted channels.

If you would like to group your favorite channels together in the Channel list please follow **STEP 4** or if you are happy with the order it is in, press the **EXIT** button and the receiver will save and exit. Press the **EXIT** button to exit the menu

STEP 4 - Grouping your favourite channels together in the channel list

- A.** From the **ORGANISING TV CHANNEL** menu, select **MOVE** at the top of the screen by scrolling across to it using the remote.
- B.** Next scroll through the channel list and press the **OK** button on the channel that you would like to move. By using the numbers on the remote, enter the number in the list of where you would like the channel to appear in the list. For example, if you would like the selected channel to be number 10 in the list, enter 0010 and press OK – the channel will then move. (For further information, please refer to your user manual)
- C.** Continue this with the various channels until you are satisfied with the list.
- D.** Once you are finished press the **EXIT** button on the remote and the receiver will save and exit.
- E.** Now press the **EXIT** button to exit the menu.

Please make sure all of the channels are working and are in your order of preference.

The Christian Channels:

- 1. Hope Channel**
- 2. 3ABN**
- 3. Trinity**
- 4. JCTV**
- 5. The Church Channel**
- 6. Smile of a Child**
- 7. God TV**
- 8. Daystar TV**
- 9. Inspiration Network**
- 10. EWTN**
- 11. Apostolic Oneness Network (AON)**

Other Channels of Interest

- 1. Press TV**
- 2. Russia Today**